


Tre Modular - Quad LFO

User Manual

Thank you for choosing the Tre Modular - Quad LFO Eurorack module!

This guide will walk you through the features, and usage of this module.

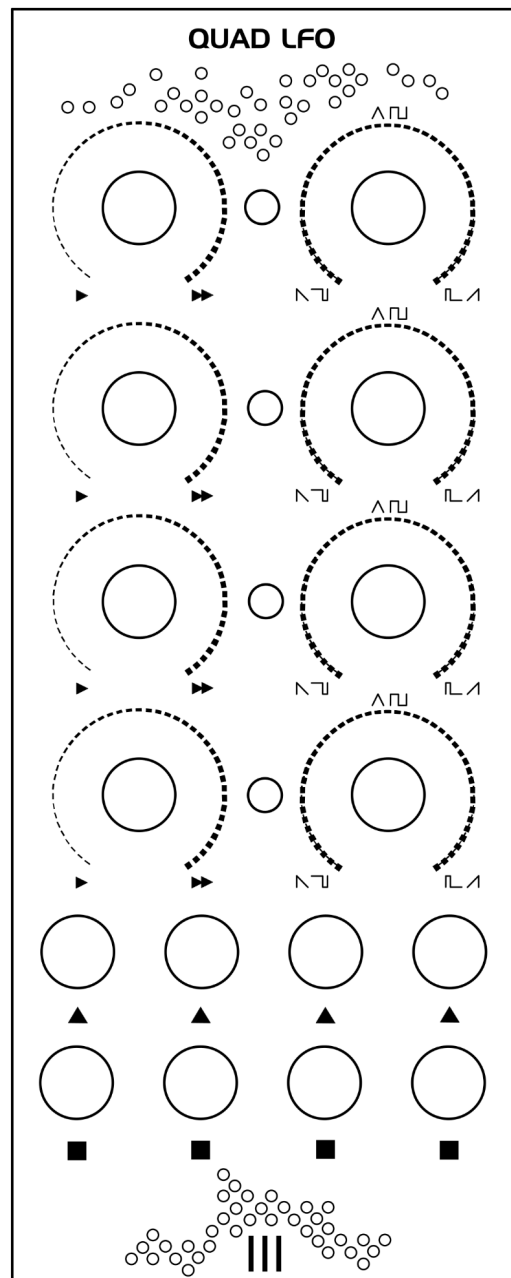

Speed Control:

On the left side of the module you can find speed control knobs for all channels. Adjust the speed of the corresponding LFO channel. Turn clockwise for faster modulation and counterclockwise for slower modulation.

Pulse Width/Shape Control Knob

On the right side of the module you can find pulse width/shape control. Rotate the knob to morph between sawtooth, triangle, and ramp waveforms. Turn counterclockwise for sawtooth waveform and clockwise for ramp waveform and in the middle it produces triangle waveform.

At the corresponding channels square wave output this control changes the pulse width of the square wave.

Specifications:


Frequency range: 0.01Hz - 45Hz

Module width: 10 HP

Module depth: 25mm

Power Consumption: 14mA at +12V / 16mA at -12V

Speed Control Shape/PW Control

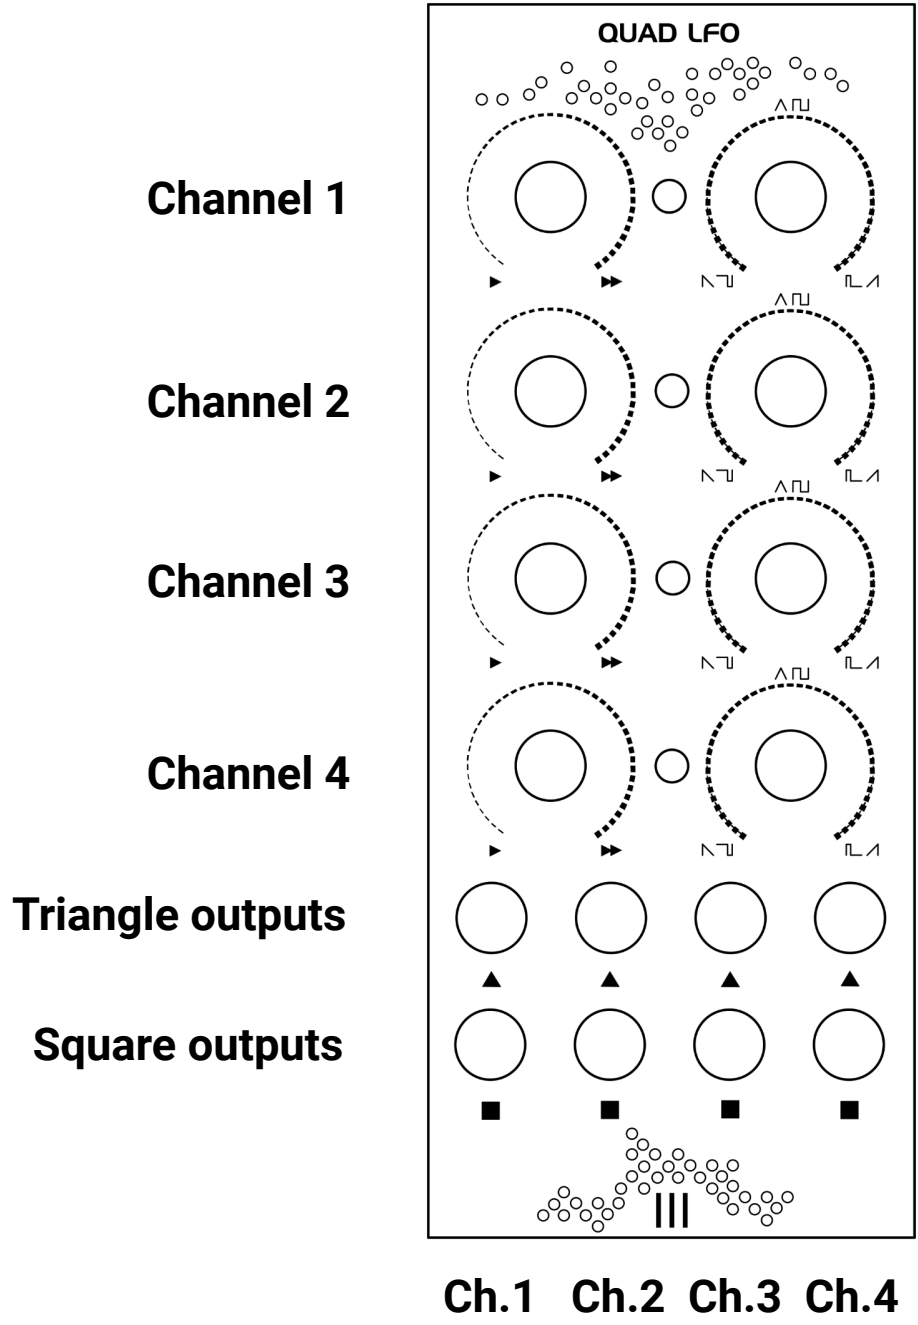

Installation:

Power off your Eurorack system.

Insert the module into an available slot.

Connect the power cable, ensuring correct polarity.

Power on your Eurorack system.

Enjoy!

Additional Information:

For any additional questions or support, please contact Tre Modular at support@tremodular.com.

Happy patching!

